



Haz Marble Fixing Instructions on isolated walls:

Stone type:	Giallo Alawa
Stone size:	3x120x180 cm
Projection:	90 mm
Wall type:	Reinforced & filled solid block work / concrete walls
Fixing system:	AXO1 Body anchor

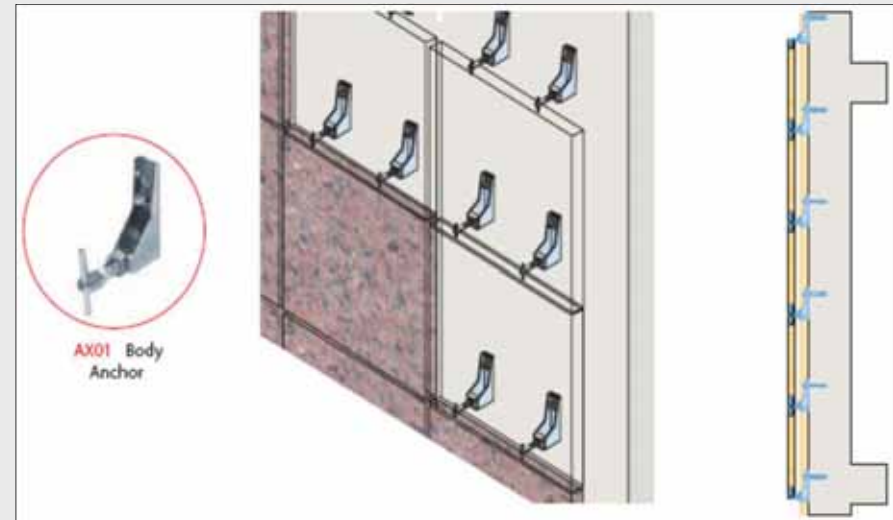



- Cutting of isolation.
At Anchoring position

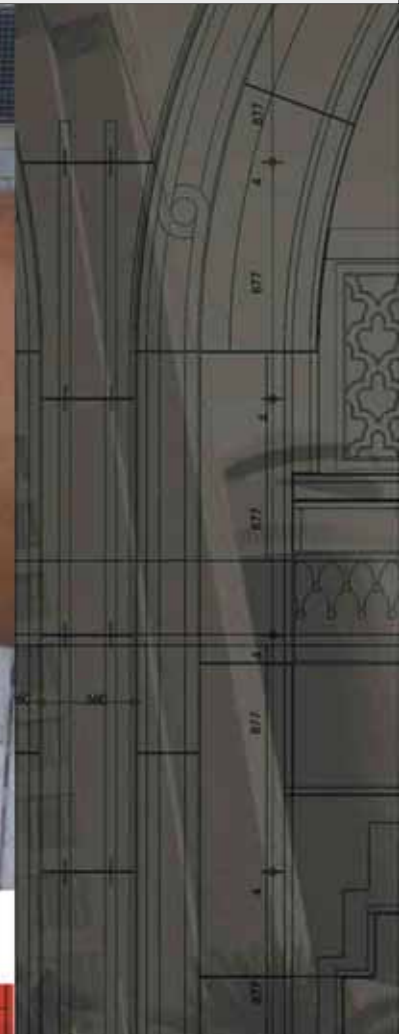




• Removing isolation.





- Drilling reinforced and filled blockwork wall with Ø10 drill bits.

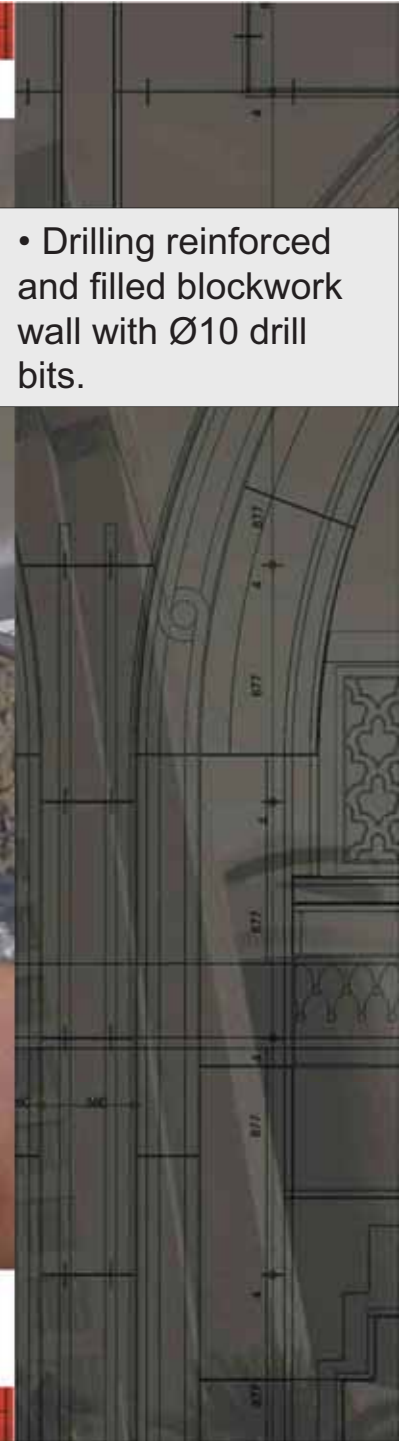




- Placing HB05 Shell bolt.






- Hammering in bolt.

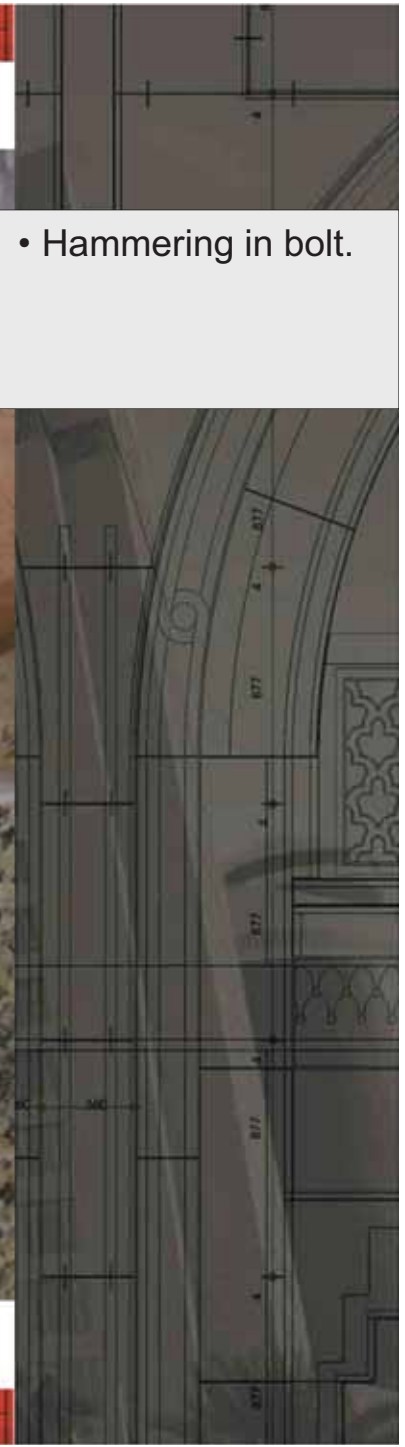




- Fixing AXO1
Body –Anchor
With torque-key

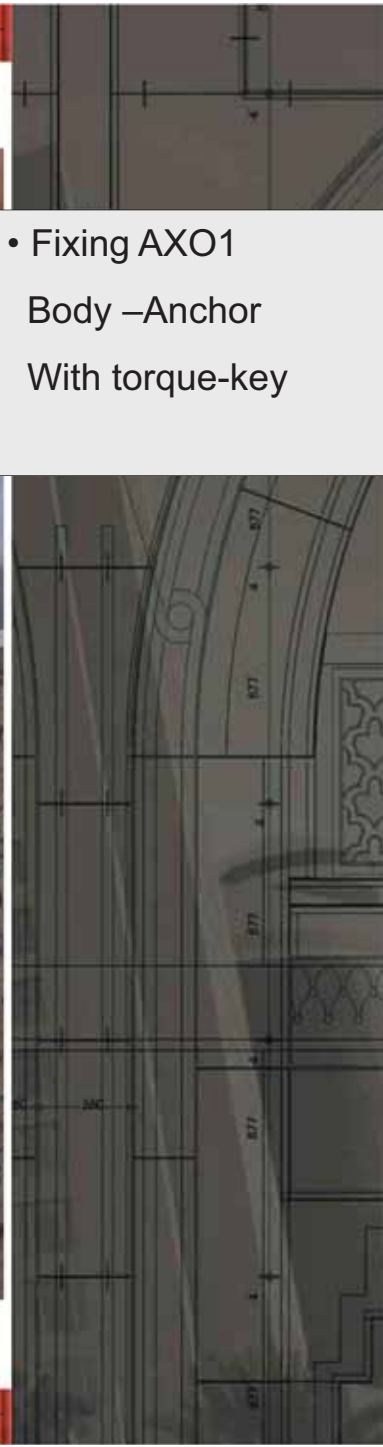



• Placing back cutted isolation.

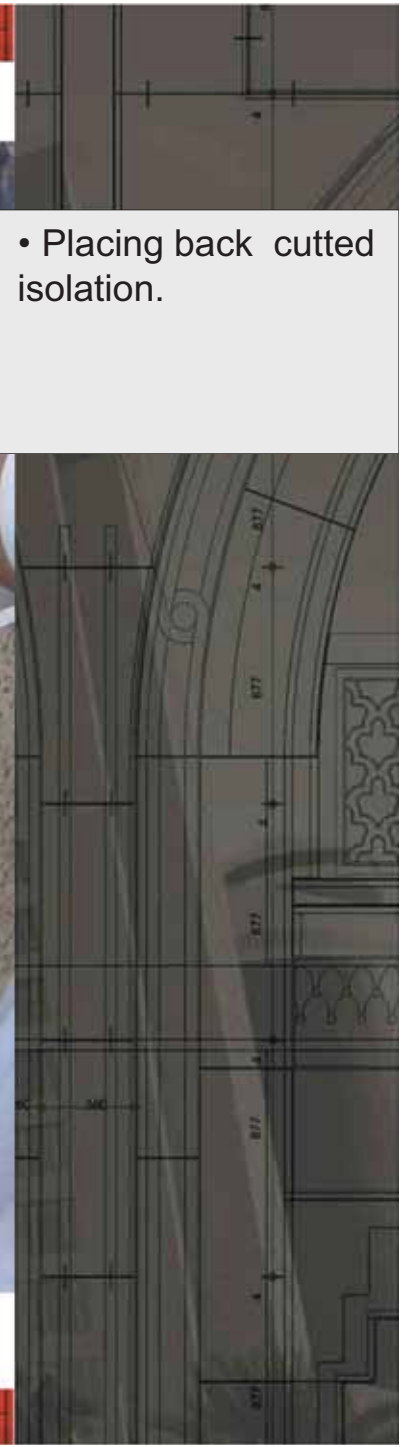




- Isolation tape for securing isolation.





- Securing isolation with isolation tape.

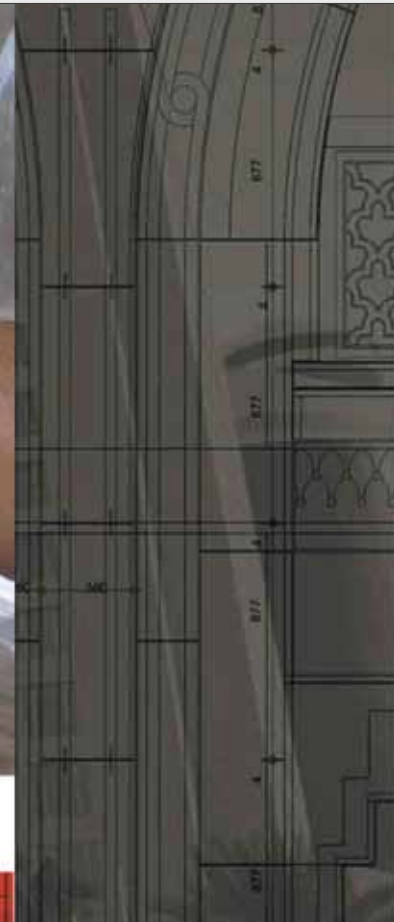



- Secured isolation.





- Natural stone facade installed on isolated walls.

